



Manual

RGB+CCT Remote (2.4G)

Model No.: HR03 / HR03B

 
Features

- RGB, Saturation Color temperature, Brightness dimmable
- 2.4G RF wireless transmission technology
- Control distance 30m
- 4 Zones individual control, countless lights in each zone
- Support to save 4 scenes


Parameters

Model No.: HR03 / HR03B
Battery: 3V (CR2032*2PCS)
Standby Power Consumption: 8 μ A
Transmitting Power: 6dBm
RF: 2.4GHz
Control Distance: 30m
Working Temperature: -20~45°C

Remote control


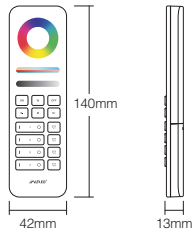


Magnetic base holder

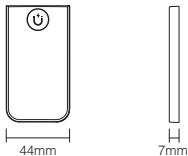 

Battery Installation

  User need to buy battery separately, please pay attention to battery "+" and "-"

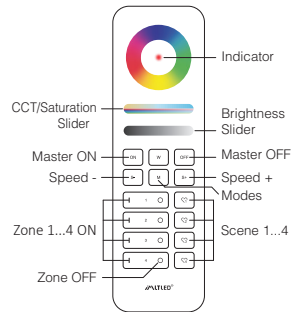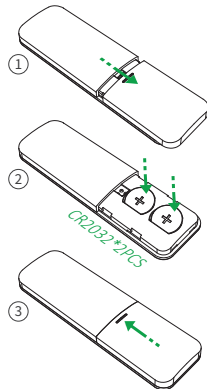

- | Short Press:** Turn on light
Long Press 2S: Maximum brightness
- Short Press:** Turn off light
Long Press 2S: Activate night light mode
- ♡ ... ♡ Short press:** Activate scenes
Long press: Save scenes

- Touch the color ring to change colors.
- Under white light mode, adjust color temperature;
Under color light mode, change color saturation.


Slider to adjust the brightness.

W Short press once to white light mode.
Press "W" button continuously to lock/unlock the touch slider.

Press "W"	10 times	15 times	20 times
lock/unlock	Release Locking	Lock RGB Slider	Lock all Slider
Remote Indicator	flashes 3 times quickly	flashes 6 times quickly	flashes 3 times slowly

- M** Dynamic mode switching button.
- S+** Increase the speed of dynamic mode.
- S-** Decrease the speed of dynamic mode.

 
Linking Code




1 Power off



2 Turn on the light after 10 seconds

 Linking code is done if the lights flashes 3 times slowly. You only can link lights into one zone on one remote.

 
Cleaning Code



1 Power off




2 Turn on the light after 10 seconds

 Cleaning code is done if the lights flashes 6 times quickly.

Copying Function

The remote have copying function. It can copy linking data from other remote. Users don't need to link current remote if copying data successfully.



1. Activate copying function: Press "  " 10 times continuously




2. Press any button from another remote to finish copying.




Copying is done if indicator flashes 3 times slowly.

Clean Copying


Press "  " continuously 15 times until indicator flashes 6 times.


Time Setting (ON/OFF light)

0.5S: Press "  " 10 times continuously until the light flashes 2 times.


1.5S: Press "  " 15 times continuously until the light flashes 2 times.


DND Mode (ON/OFF)

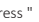ON: Press "  " 10 times continuously until the light flashes 4 times quickly.

OFF: Press "  " 15 times continuously until the light flashes 4 times slowly.

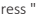

PWM Frequency (High/Low)

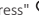High: Press "  " 10 times continuously until the light flashes 1 times.

Low: Press "  " 15 times continuously until the light flashes 1 times.

Attention: The different frequency can avoid the beeping noise from mains.

Mini Brightness

1. Long press "  " or " OFF " 6S in any group zones until lighting fixture flashes one time (step out automatically if remote don't be operated within 5S).
2. Short press "  " or " OFF " to set up 10 different levels(1%, 5%, 10%, 15%, 20%, 25%, 30%, 35%, 40%, 45%, 50%). Press any button to step out.

Attention

1. Pay attention to battery " + " and " - " while doing installation.
2. It's better to remove battery if you don't use remote frequently.
3. Don't use remote near metal or magnetic area.



For more information, scan QR code

Made in China

