



RGB+CCT Panel Remote (2.4G)

Model No.: PR02 / PR02B

Features

- RGB, Saturation Color temperature, Brightness dimmable
- 2.4G RF wireless transmission technology
- Control distance 30m
- 4 Zones individual control, countless lights in each zone
- Support to save 4 scenes

Parameters

Model No.: PRO2 / PRO2B

Battery: 3V (CR2032*2PCS)


Standby Power Consumption: 8 μ A

Transmitting Power: 6dBm


RF: 2.4GHz

Control Distance: 30m

Working Temperature: -20~45°C

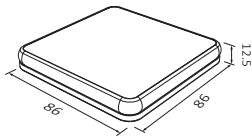


Panel Remote + Magnetic base holder

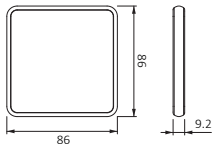

Panel Remote


Units: mm

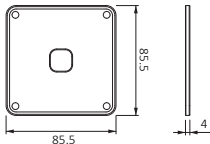

Magnetic base holder


Battery Installation


User need to buy battery separately, please pay attention to battery “+” and “-”

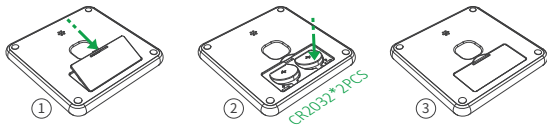

Magnetic Base Holder Installation

1. Remove the back sticker and stick it on smooth wall.
2. Please ensure that the wall is clean without any dirty or oil impurities.

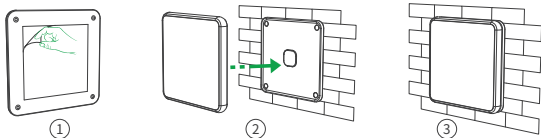

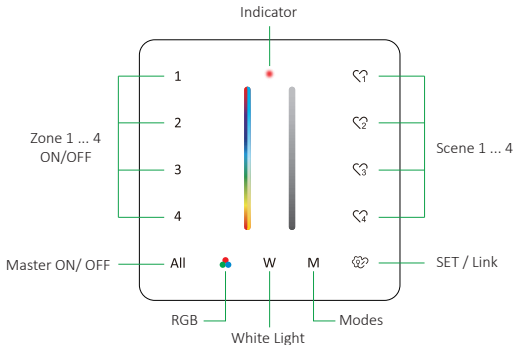

1 ... 4, All **Short Press:** ON/OFF
Long Press: Turn off light
Long Press 2S: Activate night light mode

 
Indicator status:

ON: Current zone is selected

Flashing: The light is OFF

📍 ... 📍 **Short press:** Activate scenes
Long press: Save scenes


Linking Code



1. Power off



2. Turn on the light after
10 seconds

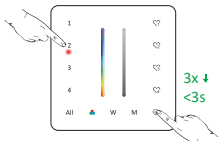


3. Short press “” 3
times within 3 seconds



Linking code is done if the lights flashes 3 times slowly.

Don't use “**All**” to link code. You only can link lights into one zone on one remote.

 
Cleaning Code



1. Power off



2. Turn on the light after
10 seconds

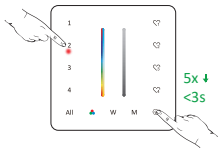



3. Short press “” 5
times within 3 seconds

 


Cleaning code is done if the lights flashes 6 times quickly.


Don't use “**All**” to Cleaning code.

RGB and Saturation Control

Short press "  " one time to activate RGB control. Short press "  " continuously to select R, G, B




Long press "  " one seconds to activate saturation control

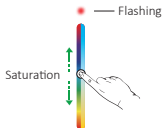


CCT and Brightness Control

Short press " W " one time to activate CCT control

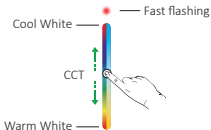

Brightness dimmable

 


Dynamic Mode

Short press " M " to activate dynamic mode
Short press " M " continuously to change mode


Speed: Long press " M " until indicator flashes to change speed

Attention: it will step out if don't have any operation within 5 seconds

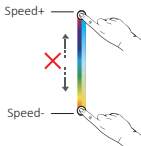

Copying Function

The remote have copying function. It can copy linking data from other remote. Users don't need to link current remote if copying data successfully.

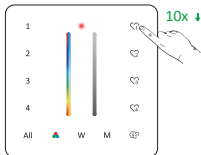

1. Activate copying function:

Press "  " 10 times continuously

2. Press any button from another remote to finish copying.


Attention: Copying is done if indicator flashes 3 times slowly.

Clean Copying

Press "  " continuously 15 times until indicator flashes 6 times.

Time Setting (ON/OFF light)

0.5S: Press "  " 10 times continuously until the light flashes 2 times.


1.5S: Press "  " 15 times continuously until the light flashes 2 times.


DND Mode (ON/OFF)

ON: Press "  " 10 times continuously until the light flashes 4 times quickly.

OFF: Press "  " 15 times continuously until the light flashes 4 times slowly.



PWM Frequency (High/Low)

High: Press "  " 10 times continuously until the light flashes 1 times.


Low: Press "  " 15 times continuously until the light flashes 1 times.

Attention: The different frequency can avoid the beeping noise from mains.

Mini Brightness

1. Long press "  " 3S until indicator is flashing (step out automatically if remote don't be operated within 5S).
2. Short press "  " to set up 10 different levels(1%, 5%, 10%, 15%, 20%, 25%, 30%, 35%, 40%, 45%, 50%). Press any button to step out.

Lock RGB Slider

Press "  " 15 times continuously until the indicator flashes 6 times.

Lock all Slider

Press "  " 20 times continuously until the indicator flashes 3 times slowly.

Release Locking

Press "  " 10 times continuously until the indicator flashes 3 times.

Key Tone (ON/OFF)

OFF: Long press " All " until the key tone is OFF.

ON: Long press " All " until the key tone is ON.

Attention

1. Pay attention to battery “ + ” and “ - ” while doing installation.
2. It's better to remove battery if you don't use remote frequently.
3. Don't use remote near metal or magnetic area.



For more information,
scan QR code

Made in China

